


# How to Measure for Replacement Windows




## Windows in Wood Siding, Hardie® Siding, Vinyl Siding, or Stucco

1. From the **inside** of the home, measure the width of the opening at top, middle, and bottom.
2. Take the narrowest measurement and subtract 1/2 inch. This will be the width of the window you order.
3. Measure the height of the opening at left side, middle, right side.
4. Take the shortest measurement and subtract 1/2 inch. This will be the height of the window you order.
5. Repeat for each opening.

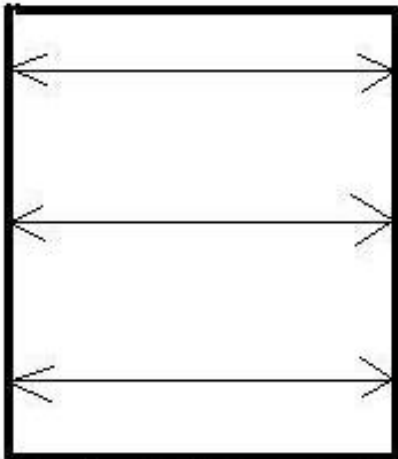

Take the shortest measurement and subtract 1/2"

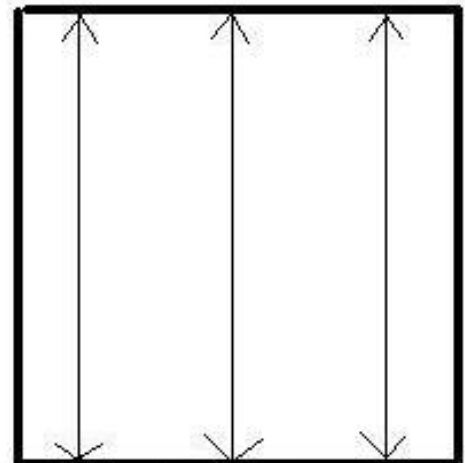

Take the shortest measurement and subtract 1/2"